

EAGLEROC E9

FireWire 800(400) and USB 2.0

Quick Installation Guide



Contents



EAGLEROC E9



FireWire 800
(9 to 9 pin) Cable



FireWire 400
(9 to 6 pin)Cable



USB Cable



Stand



AC Adaptor



Quick Installation
Guide

Minimum System Requirements

Mac Users

Hardware:

- FireWire 800 (1394b)
- FireWire 400 (1394a)
- USB (1.1 or 2.0) port(s).
- PowerPC or Intel® processor
- Mac OS 9®, X, Leopard® or Snow Leopard®

Min. recommended memory: 512 MB RAM

PC Users

Hardware:

 
- FireWire 800 (1394b)
- FireWire 400 (1394a)
- USB (1.1 or 2.0) port
- Microsoft® Windows® 2000, XP®, Vista®, or Windows 7®

Min. recommended memory: 512 MB RAM


*If you wish to utilize FireWire ports and your computer does not support such interfaces you may be required to purchase an interface as an optional device. You may also utilize your Host (Computer) FireWire 400 port to connect to the FireWire 800 port on Eagleroc E9 via an optional standard cable or a small adaptor. Please note that transfer rate will be reduced to FireWire 400 speeds at about 400 Mbits/s.

Connecting the Drive


1. Turn ON your computer and wait until it fully boots up to load all programs.
2. Connect one end of the Adaptor cord directly to the Eagleroc and the other end to an AC outlet, surge protector or battery Backup (UPS).

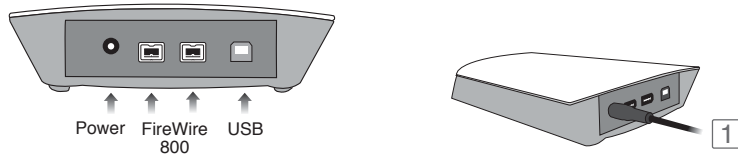

 3. Using only one interface cable at a time, select the interface port you wish to use on your computer. When using FireWire, connect one end of the FireWire cable to the appropriate FireWire port (FW800 or FW400) of your computer and then the other end to the FireWire port in the Eagleroc E9. When using USB, connect one end of the USB cable to the USB port of your computer (or via Power Hub that is connected to your computer) and then the other end to the USB port in the Eagleroc E9.

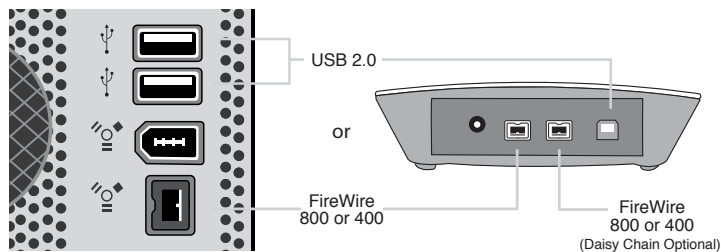

 NOTE: Although, the AC adaptor **MUST BE** connected first to both the hard drive and to electricity; however, the drive will not come “ON” until an interface (USB or FireWire) cable is fully connected.



5. The Hard drive is preformatted for Plug-and-Play operation. After a few seconds a Rocstor HD icon will show on “My Computer” folder under the Windows OS. Under the Mac OS, the Rocport HD will appear on the “Desktop.”
6. Click (double click) on the Rocstor HD icon to access the drive.

*You may also refer to the Rocstor website to view or download a full version of the Eagleroc E6 manual.
www.ROCSTOR.com

General Notices

- Consistently make multiple backup copies of your data for your protection. Hard disk drives are subject to failure at any time.
- Rocstorage, Inc. shall not be held liable for loss of data or the restoration or recovery of data on the device. Please see complete Limited Warranty Information in the User's Manual or on the Rocstor website (www.rocstor.com) for further details.

Capacity Disclaimer

Actual accessible hard drive capacity will indicate up to 10% lower than stated under different Operating Systems and formatting. Therefore, a 500GB capacity drive may show up as a 450GB drive (approximately.)

Warranty Period

The Limited warranty period for Eagleroc hard drives is two years for parts and labor.

Technical Support / RMA

Tel: (888) 877-7716 (USA and Canada)

Tel: +1 (818) 449-2000 (Domestic and Internationals)

Fax: +1 (818) 884-8777

Hours: 9:00 am - 5:00 pm PST, Mon - Fri (excluding holidays)

Email: support@Rocstor.com

Trademarks Acknowledgements

© 2010, Rocstor[®], Rocsecure[®] and Rocpower[®] are registered trademarks of Rocstorage, Inc. Rocpro, Rocport, Rocbit, are the trademarks of Rocstorage, Inc. "store your future", "secure your future" and "power your future" are the slogan marks of Rocstorage, Inc. Apple[®], the Apple logo, Mac, Power Macintosh, FireWire, and Mac Pro, Leopard... are trademarks of Apple Computer, Inc. Microsoft[®], MS-DOS, Windows[®] CE, Windows NT[®], Windows 98[®], Soft Windows[®], Vista[®], Windows[®] 7... are registered trademarks of Microsoft Corporation. All other names are trademarks of their respective companies in the United States and other countries. © 2000 – 2010



Assembled/designed/integrated in the U.S.A.
using domestic and/or foreign components.
Enclosure (without Hard Drive) is made in China.

Specifications, terms, warranties, descriptions, product and services herein are subject to change without notice.

Ver.04271