

ROCBIT FXKT

USB 2.0 Encrypted Hard Drive

Quick Installation Guide



Contents



ROCBIT FX




Key Token (x2)



USB Cable



Carrying Case

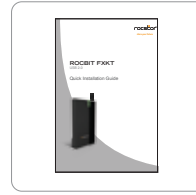

Quick Installation
Guide

Minimum System Requirements

Mac Users

Hardware:

- USB (1.1 or 2.0) port(s).
- PowerPC or Intel processor
- Mac OS 9, X, Leopard or Snow Leopard

Min. recommended memory: 512 MB RAM

PC Users


Hardware:

- USB (1.1 or 2.0) port
- Microsoft Windows 2000, Me, XP, Vista, or Windows 7

Min. recommended memory: 512 MB RAM


Connecting the Drive

1. Turn ON your computer and wait until it fully boots up to load all programs
2. Insert the digital key (key-token) in the back of the Rocbit device for authentication First.

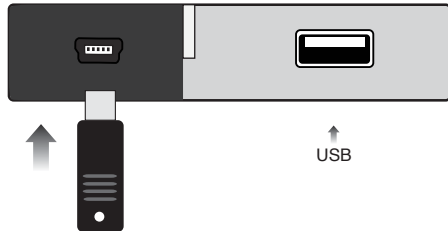

3. Using the two ends of the USB “Y” cable, connect them to the USB ports of your computer (or via Power Hub that is connected to your computer) and the other end to the USB port in the Rocbit FXKT.

After a few seconds, the light will turn blue and a Rocstor HD icon will show on “My Computer” folder under the Windows OS.

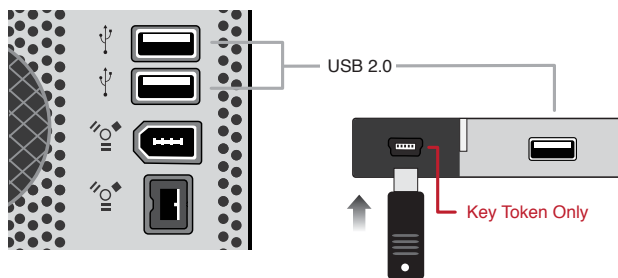

NOTE: For security reasons REMOVE (and store in safe place) the Key-token once access to the data is granted. As long as the Rocbit device is ON, the data is accessible. At this stage, the Rocbit device acts as any other standard external drive in the market. Once the drive is powered OFF you are required to insert the key-token and repeat the procedures for authentication again.

3. The Hard drive is preformatted for Plug-and-Play operation. After a few seconds, a Rocstor HD icon will show on “My Computer” folder under the Windows OS. Under the Mac OS, the Rocport HD will appear on the “Desktop.”
4. Click (double click) on the Rocstor HD icon to access the drive.

You may also refer to the Rocstor website to view or download a full version of the Rocbit FXKT manual. www.ROCSTOR.com

General Notices

- Consistently make multiple backup copies of your data for your protection. Hard disk drives are subject to failure at any time.
- Rocstorage, Inc. shall not be held liable for loss of data or the restoration or recovery of data on the device. Please see complete Limited Warranty Information in the User's Manual or on the Rocstor website (www.rocstor.com) for further details.

Capacity Disclaimer

Actual accessible hard drive capacity will indicate up to 10% lower than stated under different Operating Systems and formatting. Therefore, a 500GB capacity drive may show up as a 450GB drive (approximately.)

Warranty Period

The Limited warranty period for FXKT hard drives is two years for parts and labor.

Technical Support / RMA

Tel: (888) 877-7716 (USA and Canada)

Tel: +1 (818) 449-2000 (Domestic and Internationals)

Fax: +1 (818) 884-8777

Hours: 9:00 am - 5:00 pm PST, Mon - Fri (excluding holidays)

Email: support@Rocstor.com

Trademarks Acknowledgements

© 2010, Rocstor, Rocsecure and Rocpower are registered trademarks of Rocstorage, Inc. Rocpro, Rocport, Rocbit, are the trademarks of Rocstorage, Inc. "store your future", "secure your future" and "power your future" are the slogan marks of Rocstorage, Inc. Apple, the Apple logo, Mac, Power Macintosh, FireWire, and Mac Pro, Leopard ... are trademarks of Apple Computer, Inc. Microsoft, MS-DOS, Windows CE, Windows NT, Windows 98, Soft Windows, Vista ... are registered trademarks of Microsoft Corporation. All other names are trademarks of their respective companies in the United States and other countries. © 2000 - 2010



Designed/assembled/integrated in the U.S.A.
using domestic and/or foreign components.
Enclosure (without hard drive) is made in China

Specifications, terms, warranties, descriptions, product and services herein are subject to change without notice.

Ver.04271